


# Scan-X Reader Interface & Relay Configuration

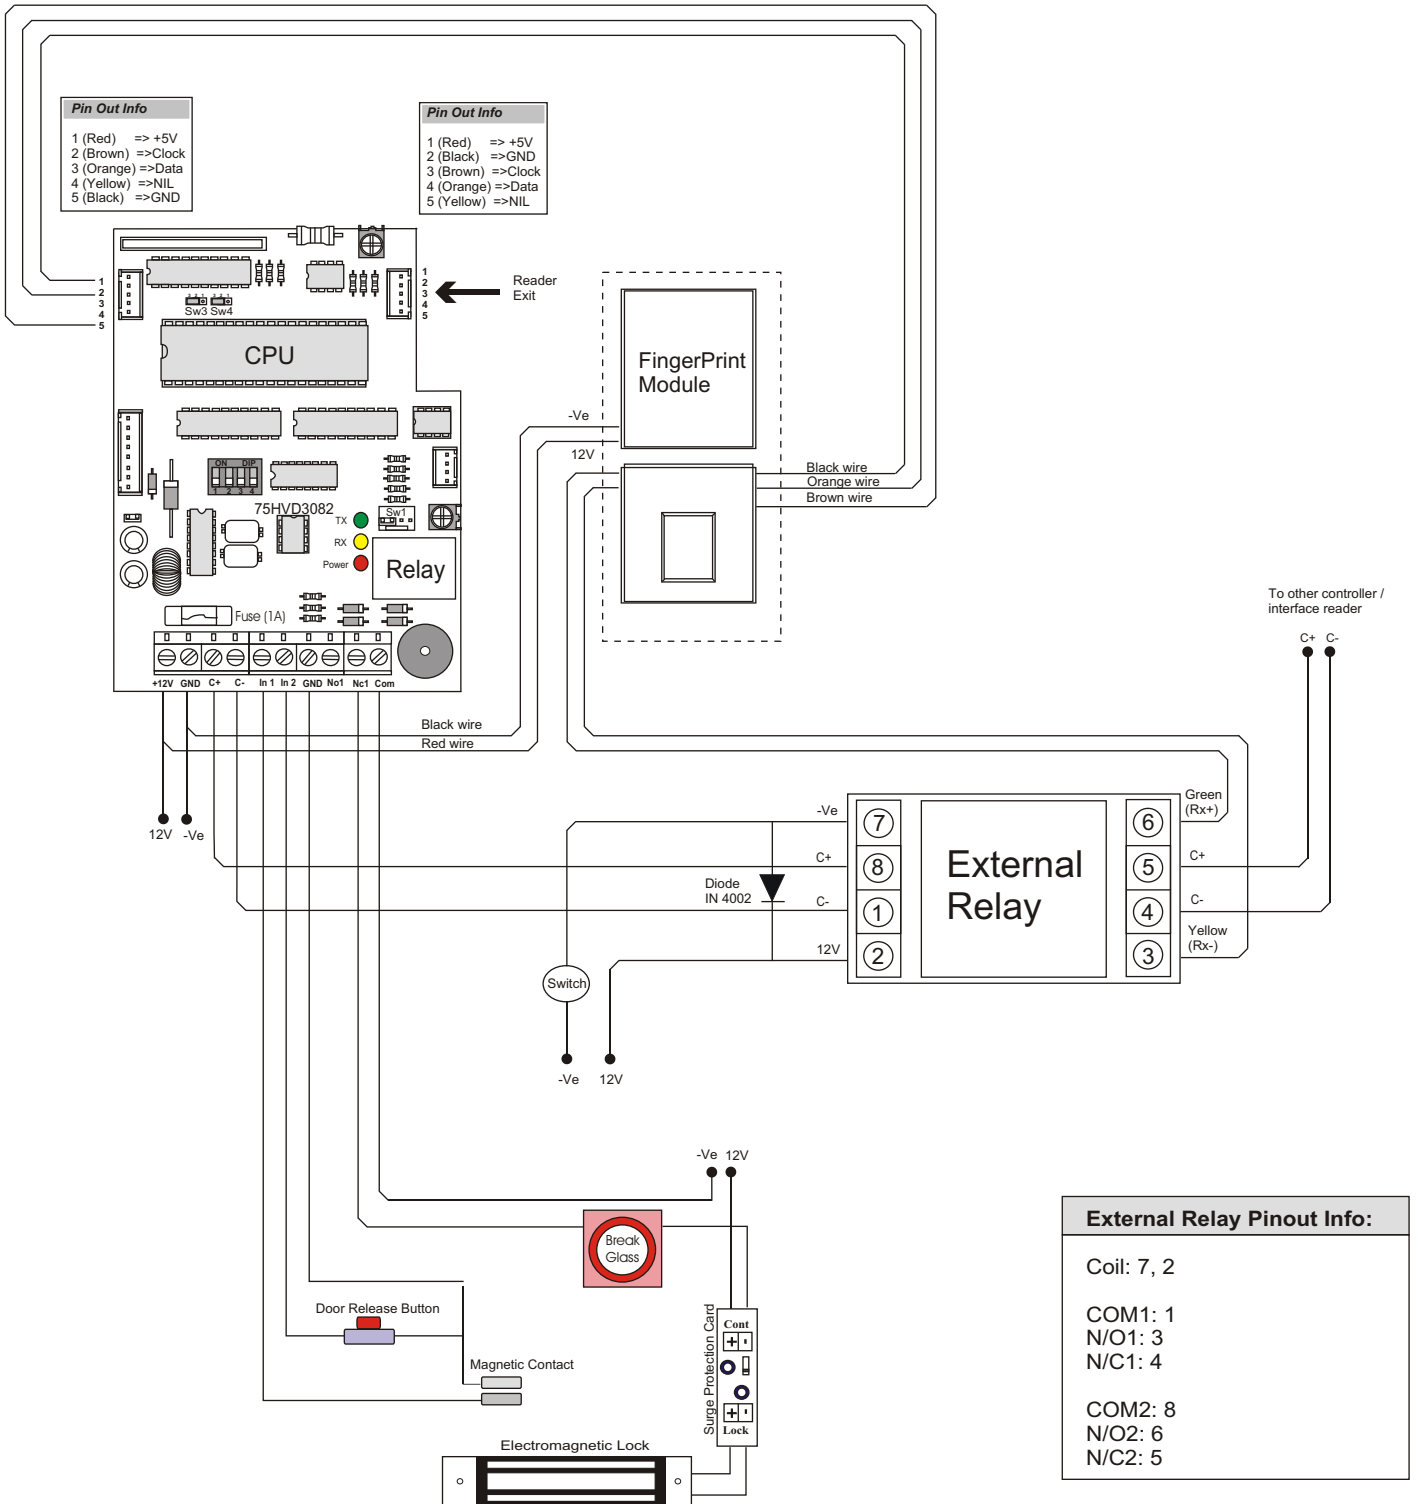

**Remarks:**

- All communication cable must be compliance to RS485 standard, with proper grounding & connected in multidrop connection.
- If input point 'IN1' not in use, connect 'IN1' to 'GND'
- Module ID must be '01'